


AMMETER BOX WIRING

NOTE:

In this example the Anderson plugs work independently to the banana/screw plugs. If you want Anderson in and banana out (or visa versa) either permanently wire the Anderson negative wire to one of the black banana sockets as well OR use a separate lead to temporarily connect the other Anderson black to one of the black banana sockets

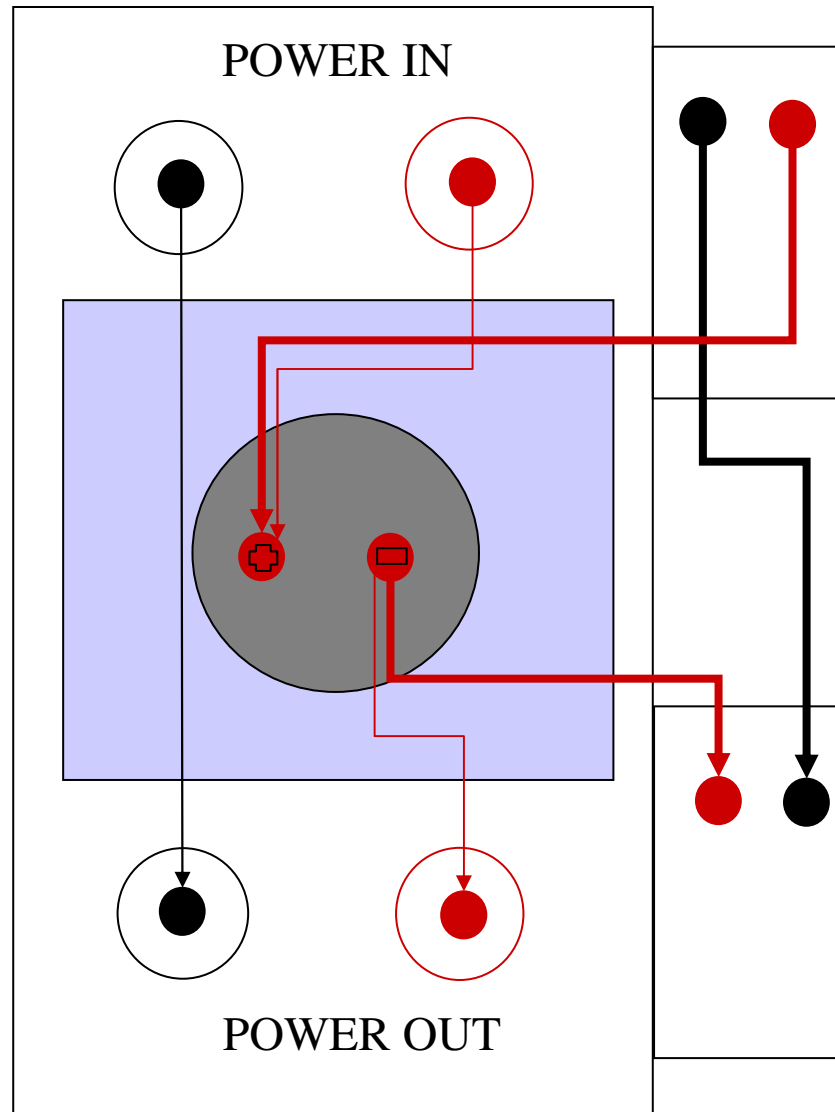

EXAMPLE 1

Solar Panel
Generator
Battery Charger



EXAMPLE 2

Battery
Cig. Pug



Battery



Inverter
Air Compressor